


ashford


INSTRUCTIONS

KNITTERS LOOM STAND 30cm(12ins) and 50(20ins)

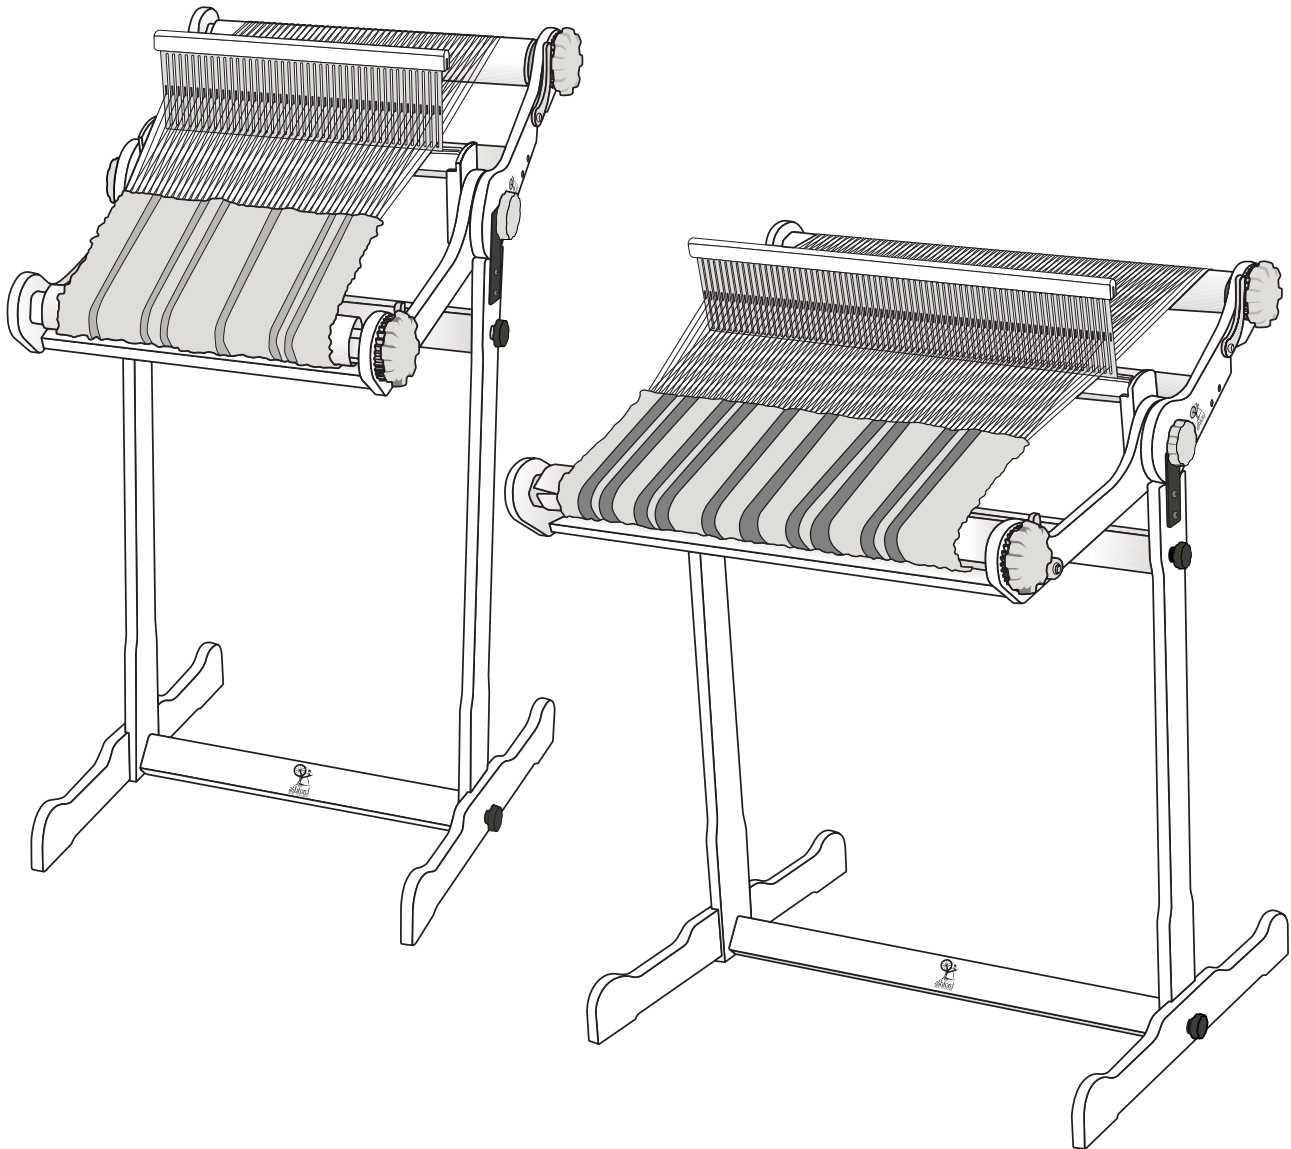

Ashford Handicrafts Ltd.
Factory and Showroom: 415 West Street,
PO Box 474, Ashburton, New Zealand
Telephone 64 3 308 9087
Facsimile 64 3 308 8664
Email: sales@ashford.co.nz
Internet: www.ashford.co.nz

Ashford Guarantee
Thank you for purchasing this Ashford product. In the unlikely event there is any fault in manufacture we will replace the item. To validate our guarantee please visit our website or write to us.
Please also join our Ashford Club for the Wheel Magazine, competitions and more at www.ashfordclub.co.nz

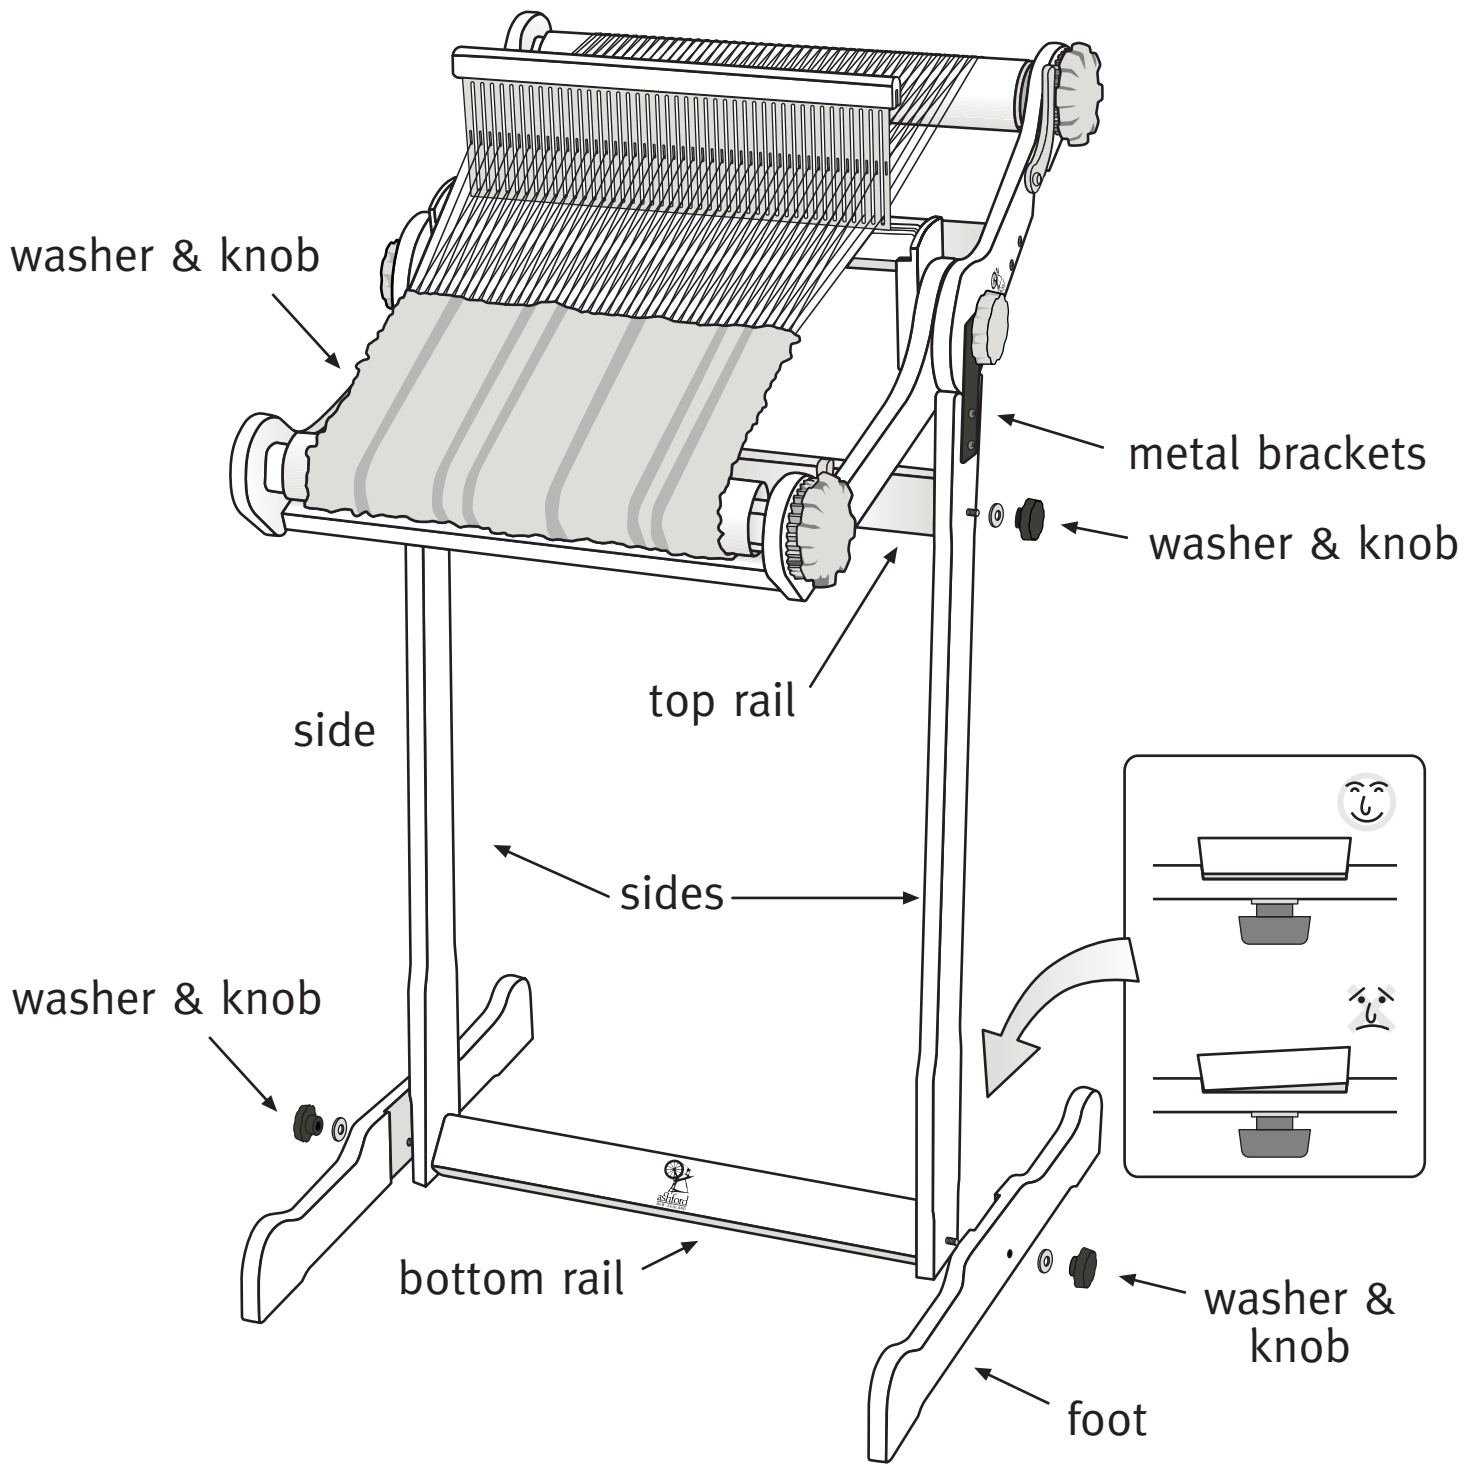

- 1 Attach the base rail (with the Ashford logo) to one side and one foot and secure with a washer and knob. Note the metal bracket faces out and the tapered side fits snugly into the tapered rebate in the foot. Tighten the knobs to make the joint tight.
- 2 Secure the top rail to the same side with a washer and knob.
- 3 Attached the other side and foot. Secure with a washer and knob.
- 4 Loosen the central knobs on your Knitters Loom about 2 turns or sufficient to allow the bolts to fit down into the slots in the metal brackets. Tilt the loom to a convenient weaving angle and tighten the knobs.