


RIGID HEDDLE LOOM STAND

For 120cm (48") Looms

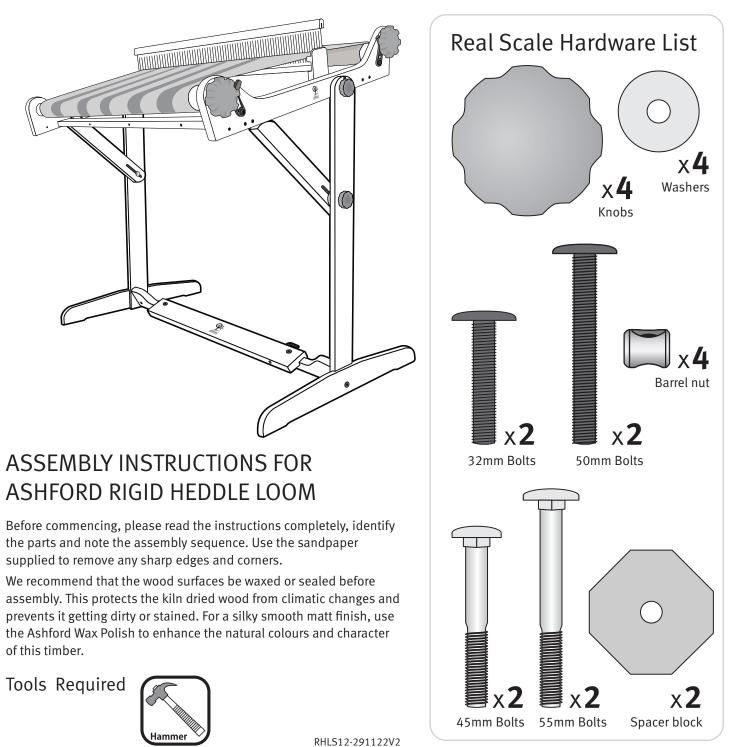


Ashford Handicrafts Limited 415 West Street, Ashburton 7700, New Zealand Telephone 64 3 308 9087 sales@ashford.co.nz www.ashford.co.nz


Ashford Guarantee

Thank you for purchasing this Ashford product. In the unlikely event there is any fault in manufacture, please contact the dealer you purchased it from. To validate the guarantee, please go to www.ashford.co.nz/product-registration

ASSEMBLY INSTRUCTIONS

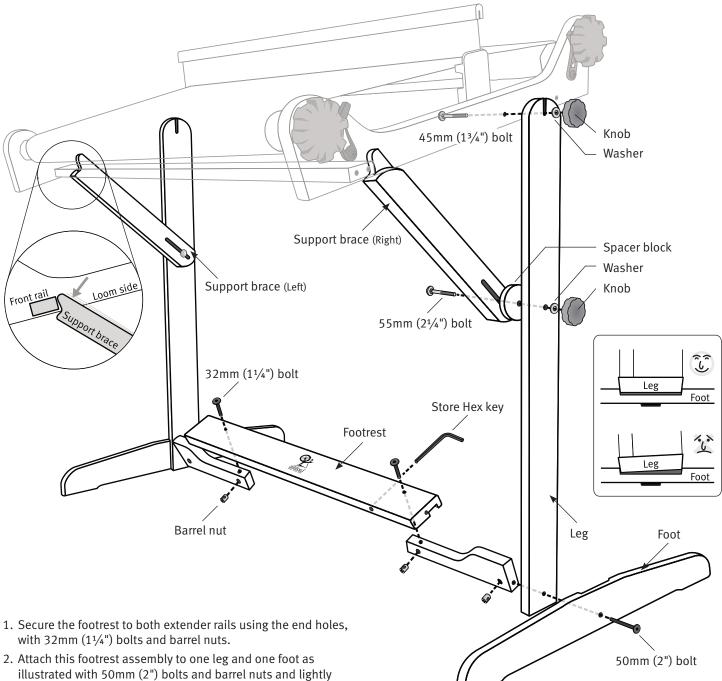

- tighten with the Hex key. Note the tapered leg fits snuggly into
- the tapered rebate in the foot. Repeat for the other side. 3. Insert $45 \text{ mm} (1^{3}/4^{"})$ bolts from the inside of your loom and tap the head of the bolt flush against the loom side. Then locate the loom and bolts into the slots in the legs and secure with washers and knobs.
- 4. Note the support braces are left and right. Check they are on the correct side and then attach them to the legs with 55mm (2¹/₄") bolts, spacer blocks, washers and knobs.

 

- 5. Sit at the loom and adjust the angle of the loom and footrest to suit. Lift the support braces up under the front cross rail and tighten all knobs and bolts.
- 6. Store the Hex key in the hole in the footrest so you can retighten the bolts if required.
- 7. The Freedom Roller can be attached to back of the loom to use when weaving thick rugs or for long warps.

Enjoy weaving on your Rigid heddle Loom!



Ashford Handicrafts Limited 415 West Street, Ashburton 7700, New Zealand Telephone 64 3 308 9087 sales@ashford.co.nz www.ashford.co.nz