


ASHFORD COUNTRY SPINNER BOBBIN

1. Locate the bobbin end 9mm (3/8") thick onto the end of the bobbin centre with the longer projection - line up the holes in both pieces. Locate the bobbin pulley on the same end and secure with 50mm (2") thin screws.
2. Locate the bobbin end with counter sunk holes on the other end of the centre and secure with 25mm (1") thin screws.
3. Place bobbin on flyer spindle with pulley to rear, then locate flyer in position on top of frame.

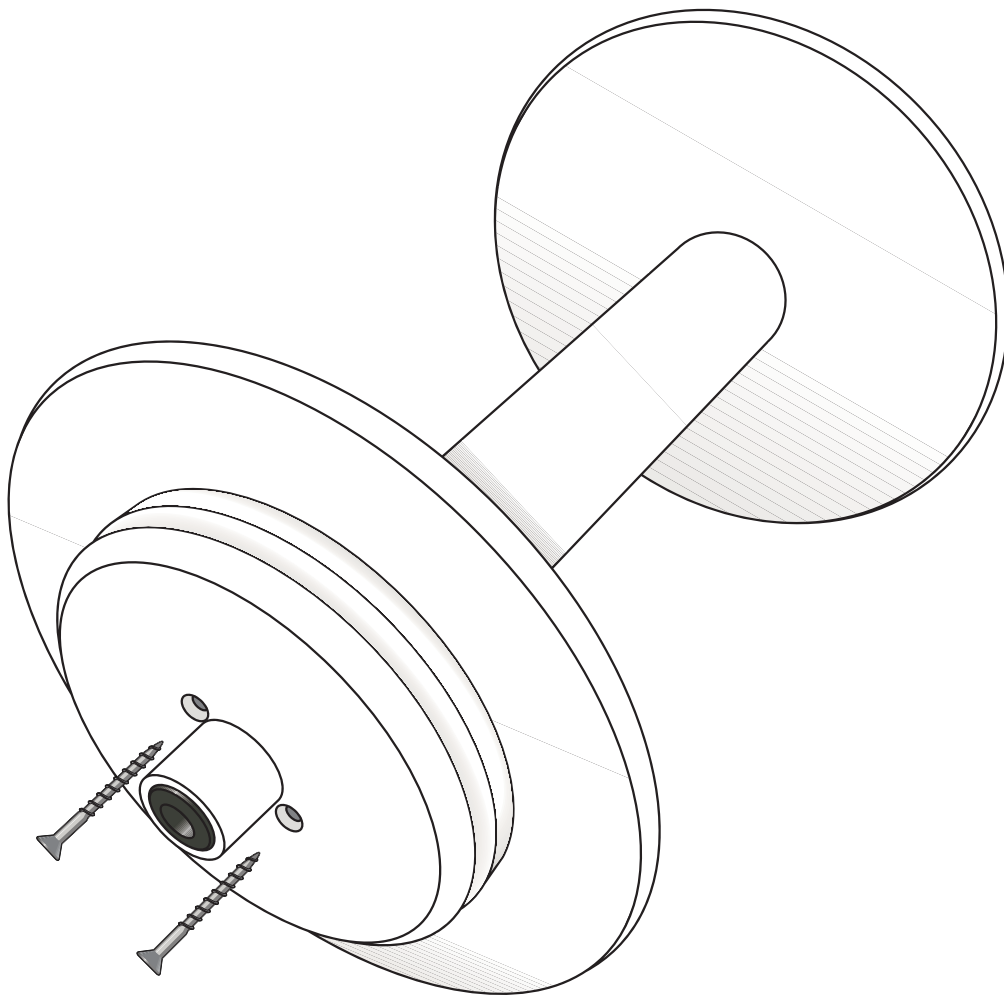

Ashford Guarantee