




ASHFORD MANNEQUIN ASSEMBLY INSTRUCTIONS

Before commencing please read these instructions carefully, identify the parts and note the assembly sequence.


Your Mannequin is made from pre-finished board and does not require any further finishing. The sandpaper provided may be used to remove any sharp edges.

The assembly sequence is from the base up.
Only use rubber washers on the flexible joints.

- Step 1** Assemble the base by slotting the two base pieces together.
- Step 2** Attach the leg to the base.
- Step 3** Now attach the thigh to the leg.
- Step 4** Attach the hips to the thigh.
- Step 5** Assemble the other leg and attach it to the hips.
- Step 6** Secure the chest to the hips
- Step 7** Assemble the two arms and attach at the shoulders.
- Step 8** Attach the head to the neck.

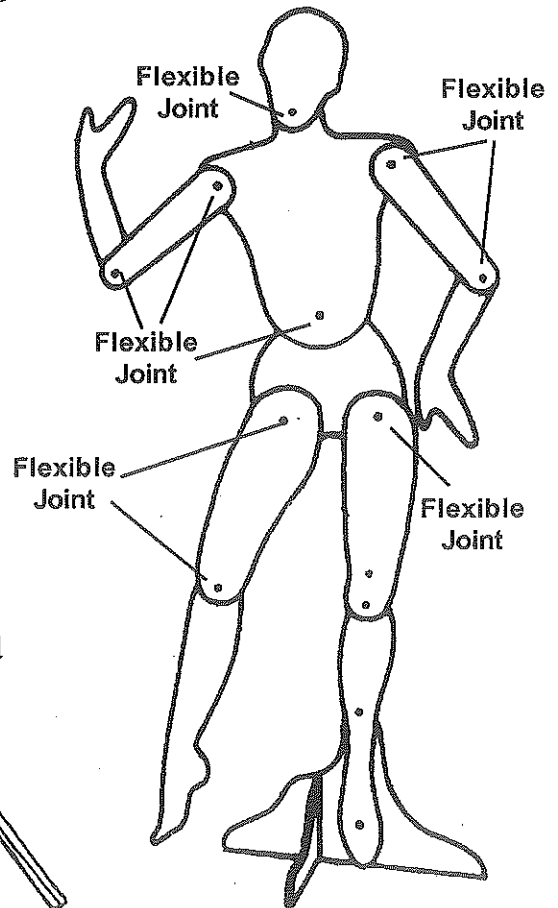

Only tighten the dome nuts sufficiently to prevent unwanted movement in the joints. Store the allen key in the hole provided in the neck.

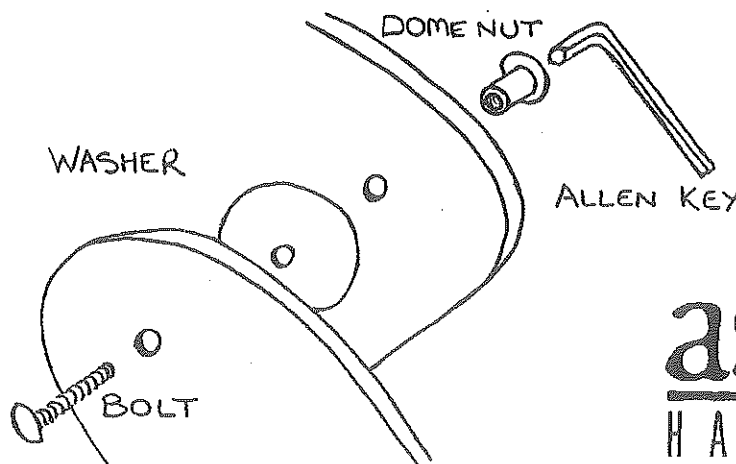

Tap head of bolt into the hole before tightening.

