



16 SHAFT LOOM STAND



Real Scale Hardware List

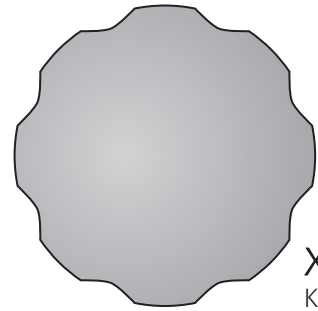


X4
Knobs

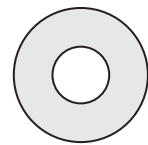

X6
Washers




X2
Nyloc nuts



X20
50mm (2")
screws



X2
75mm (3") bolt



X4
50mm (2") bolt

Before commencing: Please read the instructions completely, identify the parts and note the assembly sequence.

Your 16 Shaft Loom Stand has been lacquered. If desired, an application of Ashford Finishing Wax Polish may further enhance its appearance.

LSSS610-030522V4

Ashford Guarantee

Thank you for purchasing this Ashford product. In the unlikely event of a fault in manufacture, please contact the dealer you purchased it from.

Ashford Blog

For inspirational articles, patterns and projects. Subscribe for free www.ashford.co.nz/blog

Tools Required



Wrench



Hammer





Screwdriver



CANDLE WAX

HINT: To make assembly easier use candle wax on the screws.

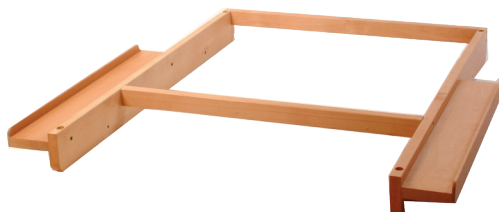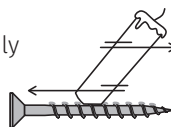

1. Using 4 x 50mm (2") screws each side, attach the sides to the long spacer rails. Make sure the 2 spacer rails are the same length. Use candlewax on the screws to make assembly easier.

2. Make sure the rounded end of the sides are facing down. The holes for the buffers on the base of the loom should be facing up.

3. Attach the shelves using 2 x 50mm (2") screws for each shelf.



4. Take the spacer rail with the Ashford logo on it and the 2 legs that correspond with the holes in the spacer rail. Attach them with 2 x 50mm (2") screws each side with the logo towards the ground.

5. Assemble the other 2 legs and short spacer rail with 2 x 50mm (2") screws each side.

6. Position the legs with the wooden spacer between them, then insert the 2 x 75mm (3") bolts through from the outside. Tap the heads of the bolts into the wood and then secure with washers and nyloc nuts.



7. Lay the loom stand base on it's side and place the top of the stand in position - make sure the front of the shelves are at the opposite end of the spacer rails with the Ashford logo. Attach the legs to the top frame with 4 x 50mm (2") bolts through from the inside. Tap the heads of the bolts into the wood and secure with washers and knobs.



Locate your Sixteen shaft loom onto the base.
You are now ready to enjoy weaving on your loom.